

Club Car DS Nerf Bars Only & Nerf Bars W/ Diamond Plate Inlays

Installation Instructions

Nerf Bars Only Black-Part# 5125, Stainless-Part# 28379
W/ D.P. Inlays Black- Part# 29076, Stainless-Part# 28343



Hardware Kit

- 4- 5/16" locknuts
- 4- 5/16" washers
- 4- 5/16 x 1 button heads
- 6- 1/4 x 3/4 button heads (for DP inlay models only)
- 6- 1/4" washers (for DP inlay models only)
- 6- 1/4" lock nuts (for DP inlay models only)
- 2-Diamond Plate Inlays (for DP inlay models only)



*Always wear appropriate
eye protection!*

Installation Instructions:

1. Back off the four self tapping screws from the rear of the rockers car as shown on Figure 1. There are two screws on each end of the rocker. Remove the stock rubber rocker covers.
2. Measure 32 3/4" from the center of the rear stock rocker hole and make a mark as shown in Figure 2. Using a 3/8" drill bit, drill a hole where you made your mark on the rocker. On some models the stock rear hole may need enlarged to 3/8". **NOTE: Make sure when drilling and enlarging the stock holes you do not the fuel cell, fuel lines, electrical lines or the stock air box.**
3. Using the supplied 3/8 x 1 button head bolts, washers, & locknuts install the nerf bars the car as shown in Figure 3.
4. Re-install the stock rocker covers at this time using the stock self tapping screws.
5. If you purchased the nerf bars with diamond plate inlays, install the inlays at this time using the supplied 1/4 x 3/4 button head bolts, washers, & locknuts as shown in Figure 4.
6. Repeat steps 1-5 for the other side of the car.

Figure 1



Figure 2

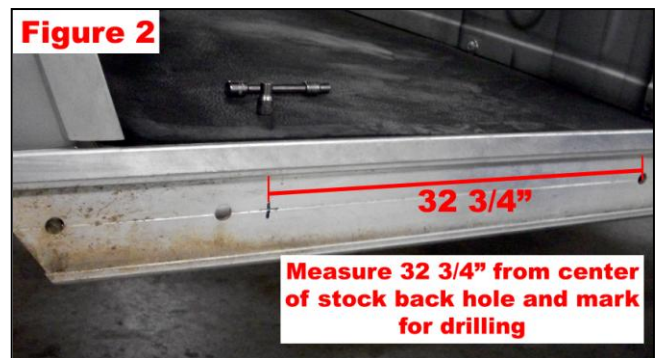


Figure 3



Figure 4



866-405-2537

www.jakesliftkits.com