

JAKES LIFT KITS

YAMAHA G14-G22 Upper Brush Guard

PART # 7058

Hardware

- 7/16 x 2 1/4 -8
- 7/16 Nuts-4
- 7/16 Washers-12
- 1 3/4" Clamps
- 5/16 x 3/4 -4
- 5/16 Locknuts-4
- 1/4 x 1 1/2 -4
- 1/4" Locknuts -4
- Front Mounting Plate-2
- Rear Hoop Mounting Plate-2



INSTALLATION INSTRUCTIONS:

1. Remove the front cowl/dash trim from the cart.
2. Unbolt the bottom portion of the front cowl from the cart.
3. Bolt the supplied mounting plates to stock frame and drill the both holes as shown in FIGURE 1 using a 3/8" drill bit.
4. Remove the front mounting plate and place behind the body as shown in FIGURE 2.
5. Using the stock bolts, washers and nuts, bolt the mounting plate to the body on both sides of the cart.
6. Re-install the stock rubber trim.

Figure 1

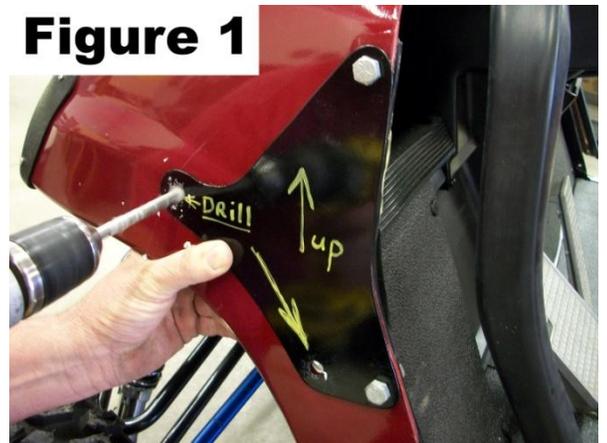


Figure 2



Figure 3



7. Hold the seat back mounting plates to the rear seat back and mark holes for drilling. You want to keep the clamp off the body, so put a 1/8" piece of cardboard under the clamp to insure the clamp will not hit the body when mounted as shown in Figure 3.

8. Using a 1/4" drill bit, drill both holes on both seat back supports.
9. Bolt the rear hoop mounting plates to the cart using the supplied 1/4 x 1 1/2 bolts and locknuts.
10. Mount the rear hoop ITEM A to the cart using the supplied clamps as shown in Figure 4.
11. Place the grab handle bars ITEM B to on the rear loop as shown in Figure 5. Do not bolt at this time.
12. Slide the front down rails ITEM C into the top grab handle bars ITEM C and mount the bottom mounts to the front mounting plates using the supplied 5/16 x 3/4 bolts and locknuts as shown in Figure 6.
13. Using the supplied 7/16 x 2 1/4 bolts, nuts, & washers bolt the upper brush guard together. NOTE- upright holes may need reamed with a 7/16" drill bit.
14. Securely tighten all bolts.



Figure 4



Figure 5



Figure 6

WARNING: This device does not provide roll-over protection. NON-R.O.P.S. RATED