


**E-Z-GO 6" Spindle Lift
2001.5 & Newer TXT Electric
Installation Instructions
Part# 6208
U.S.PAT. 7185901**




<u>ITEM</u>	<u>QTY</u>
A. PASSENGER SIDE SPINDLE	1
B. DRIVER'S SIDE SPINDLE	1
C. REAR SHOCK PLATE	2
D. 6 1/2" BOLTS AND LOCKNUTS FOR REAR	8
E. REAR LIFT MOUNT	2
F. WARNING LABEL	1

**** These spindles are pre-drilled to accept Jake's hydraulic front brake kit. ****

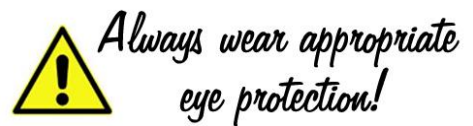

FRONT INSTALLATION


1. Jack up the front end of the cart and place it on jack stands. You will be installing larger wheels and tires so raise the cart high enough to accommodate for the additional height.
2. Remove wheels and tires.
3. Remove the tie rod ends from the spindles.
4. Remove the spindles from the front axle.
Clean and lubricate these bolts and king pin tube for the reinstallation of the spindles.
5. Install JAKES spindles to the front axle using the stock king pin bolts and king pin tube.
NOTE: The Passenger side is (Item A) and the Driver's side is (Item B).

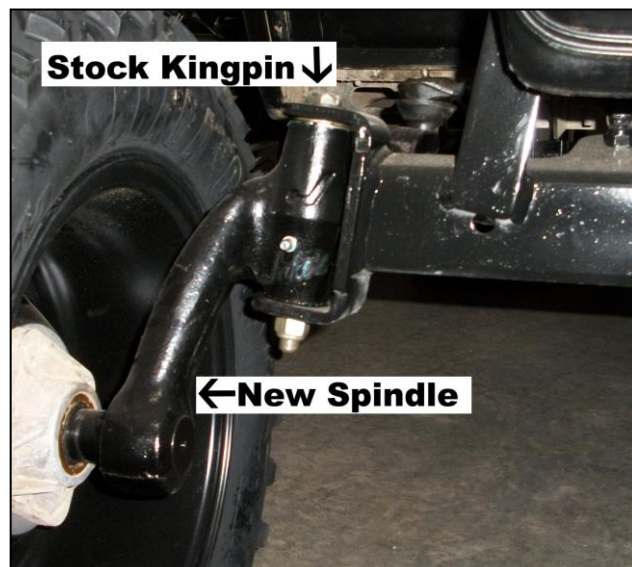

6. Reattach the tie rod ends to the new spindles.
7. Securely tighten all bolts.
8. Install JAKES recommended 22 x 11 x 10 wheels and tires with a 3 x 5" offset for maximum performance and stability. **NOTE:** Your stock wheels and tires will not work!
9. Take the cart off of the jack stands and lower the cart.
10. Drive the cart forward 10-20 feet and check the toe-in. (Proper toe-in should be approximately 1/8".)

REAR INSTALLATION

1. Jack up the rear end of the cart and place jack stands on the frame in front of the springs. Place a car jack under the rear-end housing. You will be installing larger wheels and tires so raise the cart high enough to accommodate the additional height.
2. Remove the wheels and tires.
3. Unbolt the bottom of the shocks. Clean and lubricate these bolts for later use.
4. Unbolt the rear leaf springs from under the rear end. Save the front and rear leaf spring bolts for reinstallation of the leaf springs. Using the car jack lower the rear end of the cart.
5. Place JAKES rear risers (Item E) on top of the axle as shown. **NOTE:** Parts are universal. There is no left or right side.
6. Place the leaf springs on top of the risers and loosely mount the front of the leaf springs to the stock front leaf spring mount using the stock hardware.
7. Place JAKES rear shock plates (Item E) on top of the leaf springs with the shock mount holes facing the rear of the cart and towards the center. Using the supplied 6 1/2" bolts and locknuts (Item D) mount the shock plates to the rear risers with the leaf springs sandwiched in between them. The bolts go through the new shock mount, rear risers, and stock shock mount. Make sure you tighten these bolts evenly.
8. Using the stock leaf spring bolts and nuts, bolt the rear leaf spring to the stock rear leaf spring mount. Attach the bottom of the shocks to JAKES new shock mounts on the rear shock plates using the stock nuts and bolts.
9. Use wire ties to fasten the brake cable to either the underside of the springs or the frame.
10. Securely tighten all nuts/bolts.
11. Install JAKES recommended wheel and tire size 22 x 11 x 10 wheels and tires with a 3 x 5" offset for maximum performance. **NOTE:** Your stock wheels and tires will work but are **not** recommended!
12. Included is a warning label (Item F) which is to be placed on the steering column or another visible area and should be read by any and all operators.

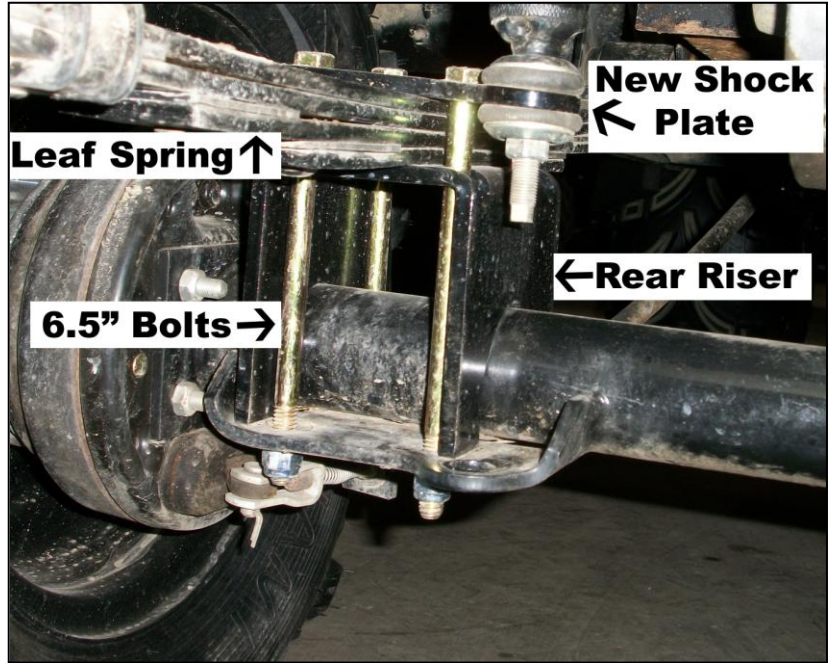

Indemnification And Insurance Agreement

High Performance Enhancement Kit purchaser assumes sole and entire responsibility for, and shall indemnify and save harmless Nivel LLC, from any and all claim, liability, responsibility, and persons or property that may be sustained in connection with the use of any product before or after purchase, including but not limited to high performance enhancement lift kits. The High Performance Enhancement Kit purchaser also shall indemnify Nivel LLC harmless with respect to any and all liability that may be incurred.

Golf Cars are recommended for use only by those aged 16 and older. Golf Cars can be especially hazardous to operate. Always remember that riding and alcohol/drugs don't mix. Never ride on public roads. Never carry more than two passengers (except shuttles and trams). Never engage in stunt driving. Avoid excessive speeds and be particularly careful on difficult terrain. Nivel LLC reserves the right, at any time, to discontinue or change specifications, prices, designs, features, models, or equipment without notice and without incurring any obligation.



866-405-2537

www.jakesliftkits.com

© Copyright Nivel LLC
All Rights Reserved